

Qwel™ Wall Tile Installation Instructions

Installation Prep

Materials needed:

- Sharp utility knife
- Tape measure
- Level
- Pencil
- Roller
- Straight edge

Personal protection equipment is not required to handle Qwel ceiling tiles.

Before You Begin:

1. Ensure that the interior vertical surface is clean, dry, and free from dust, grease or any other contaminants.
2. Gather all necessary tools and materials for the installation.

Step 1: Measure and Plan

1. Measure the height and width of the wall surface where you want to install the acoustic wall tiles. Calculate the total area in square feet or square meters to determine how many tiles you'll need.

Step 2: Prepare the Tiles

1. Lay out the Qwel acoustic PET wall tiles flat on a clean and dry surface and allow them to acclimate to the room temperature for at least 24 hours before installation.
2. During this time, inspect the tiles for any defects or damages. Do not install damaged tiles.

Step 3: Layout and Positioning

1. Determine the starting point for your installation. Usually, it's best to start from a corner or an edge of the wall.
2. Use a level and a straight edge to mark a vertical guideline on the wall, ensuring that it is straight and level.

Step 4: Peel and Stick Adhesive Application

1. Peel off the backing of the first Qwel acoustic PET wall tile, exposing the adhesive side.
2. Align the top edge of the tile with the guideline on the wall and press firmly in place.
3. Continue peeling and sticking the tiles one by one, aligning them horizontally and vertically. Use the guideline and level to maintain straight lines.
4. If necessary, cut the tiles to fit along the edges or corners using a utility knife and straight edge.

Step 5: Apply Pressure and Check Alignment

1. Once all the tiles are in place, use a roller to apply firm and even pressure across the entire surface of each tile. This helps ensure proper adhesion.
2. Periodically check the alignment and level of the tiles as you progress, making any adjustments as needed.


Step 6: Finishing Touches

1. Clean the surface of the acoustic PET wall tiles with a soft, damp cloth to remove any dust or residue.

Congratulations! You have successfully installed Qwel acoustic PET wall tiles to your interior vertical surfaces using peel and stick adhesive. Enjoy the enhanced acoustic properties and aesthetic appeal they bring to your space..



DESIGNER ACOUSTIC SOLUTIONS

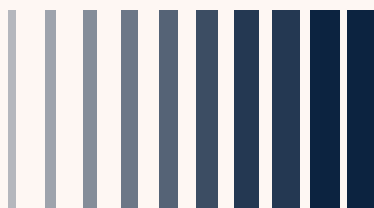

[Qweltiles.com](https://www.Qweltiles.com)
QWL-251109_1/26